![Lotus LED Lights logo]

LLL-LD2050TR

120V-347V input 0-10V Dimmable Driver for 18W Lotus LED Lights plenum rated models

Project: _____

Location: _____

Qty: _____

Notes: _____

DESCRIPTION

120-347V Input Driver 0-10V Dimmmable for Lotus LED Lights plenum rated models with armoured cables
Output max 38 V DC, Constant Current 430 mA, PF > 0.95
Connection box wire capacity: Maximum of 5 No 12 AWG or 8 No 14 AWG

DIMENSIONS: 3 1/2" x 3 1/2" x 1 1/2"

COMPATIBLE FIXTURES
LD4R-HO
LD4S-HO
LD4R-HO-IT
LD6R
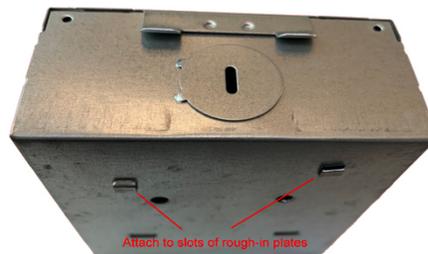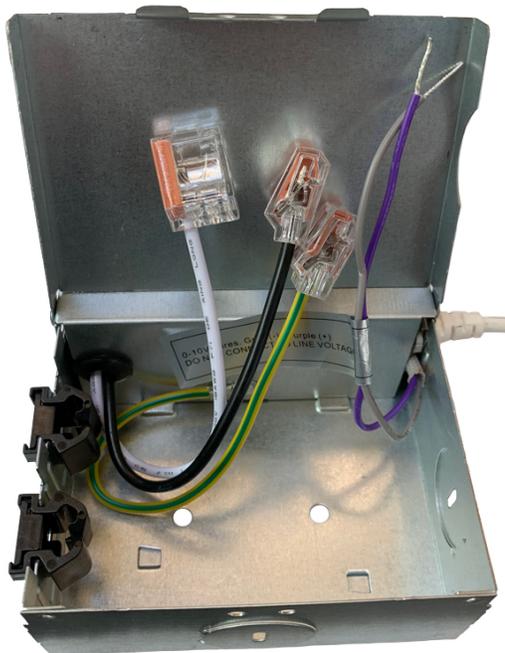**LD8R**
LL6RR
LL6SR

CABLE CONNECTORS
2 knock-outs 7/8"
2 Romex quick connectors

MOUNTING
on Lotus **FRP** plates
on Lotus **RIP** plates
directly on joist

ORDERING GUIDE
cat # **LLL-LD1535TR**

Attach to slots of rough-in plates

Input: White (Neutral) & Black (Hot) wires with quick connectors. Connect to 120V - 347V AC according to the Dimmer Manufacturer's Instructions.

Output: Armored FT6 / CMP rated cable with metal screw-in connector. Connect to compatible Lotus LED fixture from the list above

0-10V control wires: Grey (-) and Purple (+). Connect to dimming or control system 0-10V only. DO NOT CONNECT TO LINE VOLTAGE.
If you short the Grey and Purple wires the fixture would be dimmed to zero.

Warning: This driver is UL / cUL certified to be used only with Lotus LED Lights fixtures.
Connecting it to any other manufacturer's fixtures will void certification and warranty and may cause overheating and fire.